

Operating Instructions HITRAX GO STOPWATCH

Congratulations! Now you have a HITRAX Stopwatch from TFA.
This instrument includes a Watch, Alarm Clock, Stopwatch and Timer.

Please read this Operating Instructions to ensure that you have the full benefit of all its features.

PAGE 13

1.0 Features




Features

- 1) Current Time Display:**
 - Hour, minute, second, month, date and day of week.
 - 12 or 24 hour formats at user's option
- 2) Chronograph Display:**
 - 1/100 seconds resolution.
 - Maximum display range 23 hours, 59 minutes, 59 seconds.
- 3) Alarm Display**
 - Current Time Daily Alarm.
 - Dual Time Daily Alarm .
- 4) Timer Display:**
 - 1 seconds resolution.
 - Maximum display range 23 hours, 59 minutes, 59 seconds.
- 5) Dual Time Display**
 - Hour, minute, second .

PAGE 14

 2.0 Parts Descriptions & Function of the Buttons

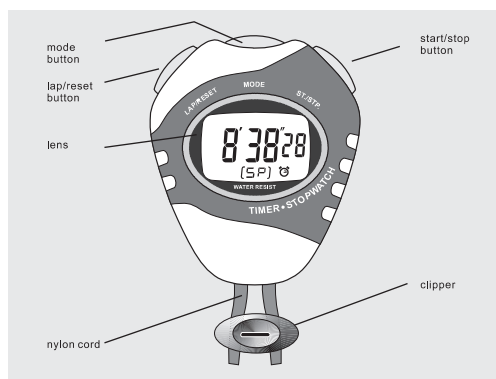


Function of the Buttons

- 1) Lap/Reset**
 - Press to select the setting modes of Current Time Mode, Alarm Time Mode, Timer Mode, and Dual Time Mode.
 - Press to reset the chronograph to 'zero' display when the chronograph is stopped.
 - Press to select the lap time display, in the Chronograph Running Display.
 - Press to return to chronograph running display when the Chronograph Lap Time Display is displayed.
- 2) Mode**
 - Press to select among Current Time Mode, Chronograph Mode, Alarm Time Mode, Timer Mode, and Dual Time Mode.
 - Press to select among the items which to be set during the setting sequence.
- 3) Start/Stop**
 - Press to start/stop the chronograph and timer.
 - Press to increase the number, in the setting sequence .
 - Press to enable/disable the chime and alarm sounds.

PAGE 15

 3.0 Major Function Modes

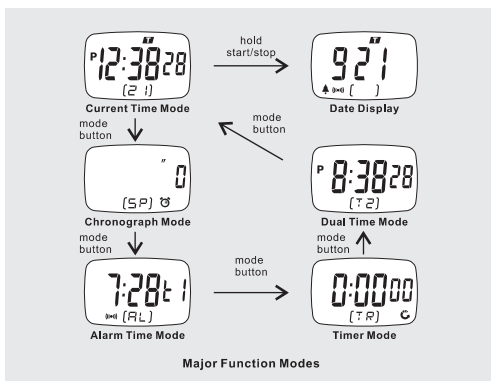

Major Function Modes

- There are 5 major function modes:
 - 1) Current Time Mode,
 - 2) Chronograph Mode,
 - 3) Alarm Mode,
 - 4) Timer Mode, and
 - 5) Dual Time Mode.

 
How to Select among Function Modes

- Press the [mode] button once to select among Current Time Mode, Chronograph Mode, Alarm Mode, Timer Mode, and Dual Time Mode.

How to Select Date Display

- Press and hold the [start/stop] button to select Date Display, in the Current Time Mode.


4.0 How to Set the Time and Date

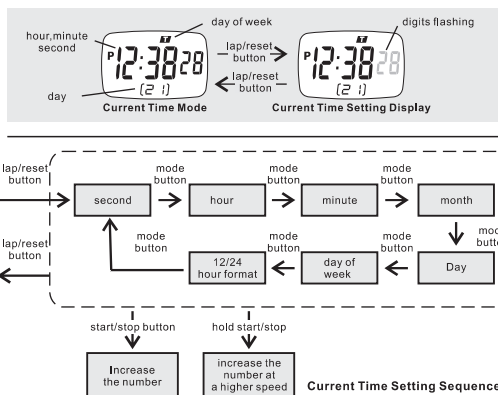

How to Set the Time and Date

- Press the [lap/reset] button to select the Current Time Setting Display, in the Current Time Mode.
- The second digits start flashing on the display because they are being selected. Press the [mode] button to select among the different setting items following the Current Time Setting Sequence, or press the [start/stop] button once to reset the second to zero second.
- If one of the setting items (hour, minute, month, day, day of week) is flashing press the [start/stop] button to change the setting, or hold down the [start/stop] button to change the setting at a higher speed.
- If the '12' or '24' is flashing, press the [start/stop] button once to select between '12' (12 hour format) and '24' (24 hour format).
- After you set the current time, date and 12/24 hour format, press the [lap/reset] button once to exit the Current Time Setting Sequence.
- If no key-stroke has been activated for 30 seconds, the setting display will return to Current Time Mode.

 5.0 Chronograph Mode

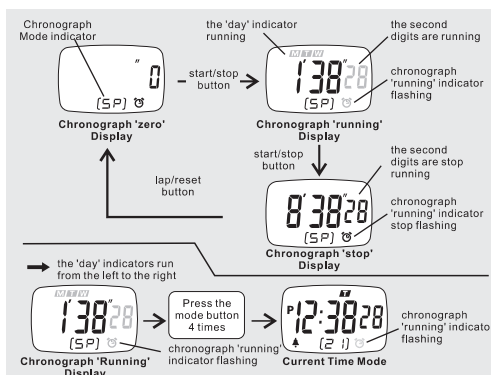

Chronograph Mode

- The Chronograph measures elapsed times and lap times. The display shows the 'Zero' display, if the chronograph is being selected the first time or the chronograph has been reset.

To Start/Stop the Chronograph

 
- When the chronograph is stopped, press the [start/stop] button once to start the chronograph; press the [start/stop] button once again to stop the chronograph.
- The elapsed time between the two 'start/stop' keystrokes will be appeared on the display.
- Repeat the above mentioned steps to get the accumulative time of which the chronograph is running.

To Reset the Chronograph

- Record a new set of accumulative elapsed time, press the [lap/reset] button to reset the chronograph to 'Zero' display when the chronograph is stopped.

NOTE: (1) The maximum counting range of the chronograph is 23 hours 59 minutes and 59 seconds, (2) If the accumulated time is long than 30 minutes, the display shows chronograph time in hours, minutes and seconds instead of minutes, seconds and 1/100 seconds. (3) If the Chronograph 'running' Indicator is flashing, the chronograph is running. If the Chronograph 'running' Indicator stop flashing, the chronograph is stopped.

5.1 How to Record Lap Time

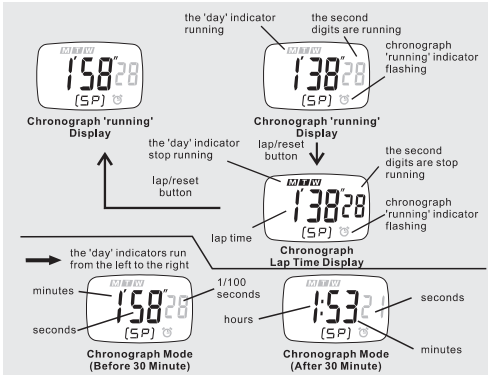


To Record Lap Time

- The Chronograph Mode allows you to record lap time.
- Press the [lap/reset] button once to record the lap time during the chronograph is running. During the lap time is displaying, the chronograph keeps on running.
- Press the [lap/reset] button once again to return to chronograph running display during the lap time is displaying.
- Repeat the steps mentioned above to get another lap time.

NOTE: (1) The maximum counting range of the chronograph is 23 hours 59 minutes and 59 seconds. (2) If the accumulated time is long than 30 minutes, the display shows chronograph time in hours, minutes and seconds instead of minutes, seconds and 1/100 seconds. (3) If the Chronograph 'running' Indicator is flashing, the chronograph is running. If the Chronograph 'running' Indicator stop flashing, the chronograph is stopped.

 6.0 Alarm Time Mode

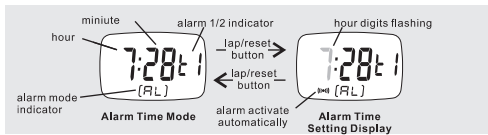

Alarm Time Mode

- Alarm 1 for the Current Time Mode; Alarm 2 for the Dual Time Mode.

To Set the Alarm Time

- Press the [lap/reset] button to change from Alarm Time Mode to Alarm Time Setting Display. The hour digits flash on the display because it is being selected.

 
The Setting Procedures

- Press [mode] button to select among the items which to be set following the Alarm Time Setting Sequence.
- If the digits are flashing, press the [start/stop] button to increase the number; hold the [start/stop] button to change the number at a higher speed.
- After setting the alarm time, press the [lap/reset] button to exit the setting sequence. If no key-stroke has been activated for 30 seconds, the setting display will auto return to Alarm Time Mode.


NOTE: Alarm will be activated automatically when setting alarm.

How to Select the ON/OFF of the Alarm and Chime

- Press the [start/stop] button to change the ON/OFF status of the hourly chime and alarm, in the Alarm Time Mode.
- If the chime indicator is appeared (chime ON), the unit beeps every hour on the hour. If the alarm indicator is appeared (alarm ON), the unit sounds at the pre-set alarm time every day.

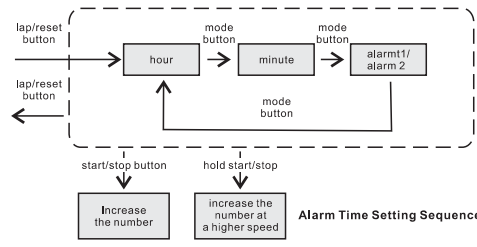

 7.0 Timer Mode

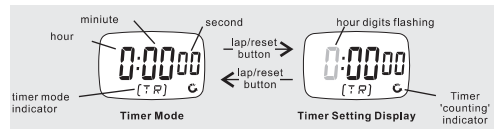


To Set the Timer


- The timer can be set/start counting from within the range from 0 to 23 hours, 59 minutes, 59 seconds.
- Press the [lap/reset] button to change from Timer Mode to Timer Setting Display. The hour digits flash on the display because it is being selected.

The Setting Procedures

 - Press [mode] button to select among the items which to be set following the Alarm Time Setting Sequence.
- If the digits are flashing, press the [start/stop] button to increase the number; hold the [start/stop] button to change the number at a higher speed.
- After setting the timer, press the [lap/reset] button to exit the setting sequence.
- If no key-stroke has been activated for 30 seconds, the setting display will auto return to Timer Mode.

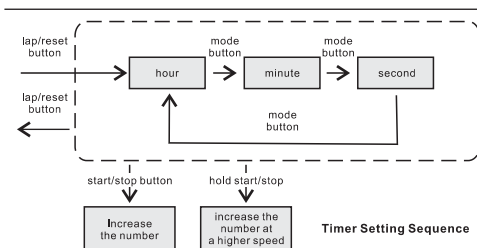

 7.1 How to Use the Timer

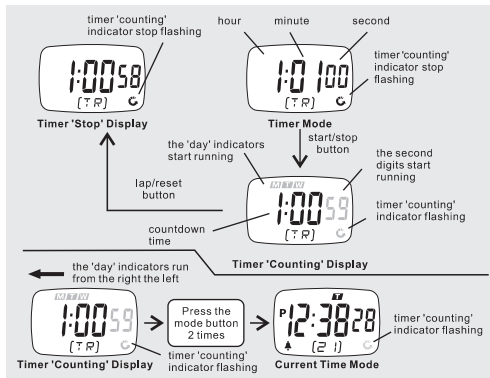

How to Start/Stop the Timer

- Press the [start/stop] button to start the timer when the timer is set, press the [start/stop] button once again to stop the timer.
- The countdown time will be shown on the display continuously.

NOTE: If the Timer 'counting' Indicator is flashing, the timer is counting. If the Timer 'counting' Indicator is stop flashing, the timer is stopped.

Alarm Sounds



- Sound 2 beeps at 30-second interval when timer remains at between 11 seconds and 3 minutes.
- Sound 1 beep at 1-second interval when timer remains at between 1 second and 10 seconds.
- Sound 3 beeps for 10 seconds when timer remains at zero second.

How to Reset/Re-load the Timer

- If the countdown time is come to zero or the timer is stopped, press the [lap/reset] button to re-load the preset countdown time into the display. Press [lap/reset] button once again to get the timer ready for counting.
- Check the 'To Set the Timer' section for setting another countdown time.

PAGE 22

  8.0 How to Set the Dual Time

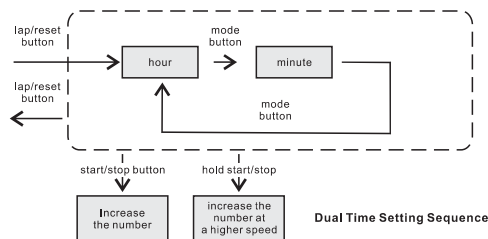

Dual Time Mode

- Dual Time Mode shows the time of the second time zone in hour, minute and second.

How to Set the Dual Time

- Press the [lap/reset] button to select Dual Time Setting Display, in the Dual Time Mode.
- The hour digits start flashing on the display because they are being selected. Press the [mode] button to select between hour and minute setting or press the [start/stop] button to change the setting (hold the [start/stop] button to change the setting at a higher speed).
- If the minute digits are flashing, press the [start/stop] button once to increase the setting by 30 minutes.
- After you set the dual time, press the [lap/reset] button to exit the Dual Time Setting Sequence.
- If no key-stroke has been activated for 30 seconds, the setting display will return to Dual Time Mode.

PAGE 23

9.0 Specifications

Current Time Mode

Time System:

- AM, PM, Hour, minute, second
- 12-hour or 24-hour format

Calendar:

- Month, date and day of week display

Alarm Mode

Alarm Type:

- Current time daily alarm
- Dual time daily alarm
- Hourly chime

Alarm Sound:

- Sound for 20 seconds when it is alarm time

Chronograph Mode

Resolution:

- Within 30 minutes: 1/100 second (Display minutes, seconds and 1/100 seconds).
- Over 30 minutes: 1 second (Display hours, minutes and seconds).

Range:

- 23 hours 59 minutes 59 seconds

Countdown Timer

Resolution:

- 1 second

Range:

- 23 hours 59 minutes 59 seconds

Operation Mode:

- Countdown to zero and stop at zero

Timer Sounds:

- Sound 2 beeps at 30-second interval when timer remains at between 11 seconds and 3 minutes.
- Sound 1 beep at 1-second interval when timer remains at between 1 second and 10 seconds.
- Sound 3 beeps for 10 seconds when timer remains at zero second.

Dual Time Display

Time System:

- AM, PM, Hour, minute, second

PAGE 24

10.0 Note

For your safety

- This product should only be used as described within these instructions.
- Unauthorised repairs, modifications or changes to the product are prohibited.



Caution! Risk of injury:

- Keep this instrument and the battery out of the reach of children.
- Batteries must not be thrown into a fire, short-circuited, taken apart or recharged. Risk of explosion!
- Batteries can be fatal if swallowed. If a battery has been swallowed, get medical assistance immediately.
- Batteries contain harmful acids. Low batteries should be changed as soon as possible to prevent damage caused by leaking.
- Wear chemical-resistant protective gloves and glasses when handling leaking batteries.

Care and maintenance

- Clean the instrument with a soft damp cloth. Do not use solvents or scouring agents. Protect it from moisture.
- Keep the instrument in a dry place.



10.0 Note

Battery

- In case of battery replacement, observe correct polarity (+ pole above).
- Remove the battery if you do not use the product for a lengthy period.

Waste disposal



Never dispose of empty batteries and rechargeable batteries with ordinary household waste.

As a consumer, you are required by law to take them to your retail store or to an appropriate collection site depending on national or local regulations in order to protect the environment.

The symbols for the heavy metals contained are:
Cd=cadmium, Hg=mercury, Pb=lead



This product is labelled in accordance with the EU Waste Electrical and Electronic Equipment Directive (WEEE).

Please do not dispose of this product in ordinary household waste. As a consumer, you are required to take end-of-life devices to a designated collection point for the disposal of electrical and electronic equipment, in order to ensure environmentally-compatible disposal.

No part of this manual may be reproduced without written consent of TFA Dostmann. The technical data are correct at the time of going to print and may change without prior notice. The latest technical data and information about your product can be found by entering your product number on our homepage.
www.tfa-dostmann.de